

Tightness control TC

Technical Information · GB

3.1.5.2 Edition 11.11



**krom
schroder**

- Test of both safety valves
- Short test period thanks to logical decision-making in the program sequence
- Adjustable test period which can be adapted to different systems
- Adjustable test instant allows quick system start
- Maximum safety thanks to self-monitoring electronics
- Less space required thanks to small dimensions
- EC type-tested and certified
- FM approved and UL listed




Contents

Tightness control TC	1
Contents	2
1 Application	3
1.1 Examples of application	6
1.1.1 TC 116V with valVario controls	6
1.1.2 TC 116W with combination control CG..D or CG..V	6
1.1.3 TC 116W with two-stage combination control CG..Z	7
1.1.4 TC 2 with two gas solenoid valves	8
1.1.5 TC 2 with two gas solenoid valves and one pilot gas valve	9
1.1.6 TC 2 with two gas solenoid valves and one auxiliary valve for discharge	10
1.1.7 TC 2 in a multiple burner system with 3 valves installed in series	11
1.1.8 TC 3 with two gas solenoid valves	12
1.1.9 TC 3 with a manually resettable valve	13
1.1.10 TC 3 in a multiple burner system	14
1.1.11 TC 4 with two gas solenoid valves	15
1.1.12 TC 4 in a multiple burner system with one auxiliary valve for discharge	16
1.1.13 TC 4 in a multiple burner system with two auxiliary valves for supply and discharge	17
1.1.14 TC 4 in a multiple burner system with 3 valves installed in series	18
2 Certification	19
3 Function	20
3.1 Connection diagrams	20
3.1.1 TC 116V for valVario controls VAS, VAG and VAD	20
3.1.2 TC 116W	20
3.1.3 TC 2	21
3.1.4 TC 3	21
3.1.5 TC 4	22
3.2 Program sequence	23
3.3 Test instant	25
3.3.1 Testing before burner run: Mode 1	25
3.3.2 Testing after burner run: Mode 2	26
3.4 Power failure	26

3.5 Animation	27
3.6 Test period t_p	28
3.6.1 Leakage rate	28
3.6.2 Test volume V_p	29
3.6.3 Calculation example	30
3.6.4 Calculating the test period t_p	30
4 Selection	31
4.1 Selection table	31
5 Type code	31
6 Project planning information	32
6.1 Selecting the auxiliary valves	32
6.2 Start rate	33
6.3 Installation	33
6.2.1 TC 116V for valVario controls	34
6.2.2 TC 4	34
7 Accessories	35
7.1 Tightness control TC 116V	35
7.2 External pressure switch for TC 4	36
7.2.1 Adjustment	36
8 Technical data	37
8.1 Indicators and operating controls	38
8.2 Dimensions	39
8.2.1 TC 1, TC 2	39
8.2.2 TC 3, TC 4	40
8.3 Conversion factors	41
9 Maintenance cycles	42
10 Legend	42
Feedback	43
Contact	43

*TC 1: for attachment
to valVario controls
and CG*
*TC 2: for quick
opening individual
valves*

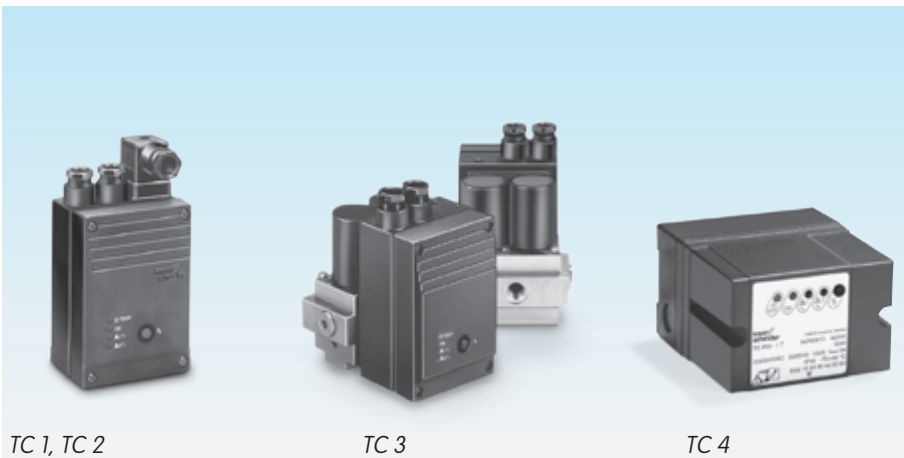

*TC 3: for quick or
slow opening or
manually reset-
table individual
valves*
*TC 4: for control
cabinet installation*

1 Application

The tightness control TC checks the fail-safe function of both valves before each start-up or after each shut-down of a system with two safety valves.

The aim is to identify an inadmissible leak on one of the gas valves and to prevent burner start. The other gas valve continues working properly and takes over the safe shut-off of the gas supply.

It is used in industrial thermoprocessing equipment, in boilers and forced draught burners.

European standards EN 746-2 and EN 676 stipulate tightness controls for capacities over 1200 kW (NFPA 86: from 117 kW or 400,000 Btu/h in conjunction with a visual indicator). Pre-purge of the combustion chamber can be dispensed with under certain conditions in accordance with EN 746-2, if a tightness control is used. In this case, the system must be vented into the open air.

TC 1

Tightness control TC 1 can be directly mounted to all CG combination controls. There is only one version for all sizes. The pre-set test period applies to all CG variants.

In addition, TC 1 can be used for valVario controls VAS, VAD and VAG (with separate adapter plate, see page 35 (Accessories)).

TC 2 and TC 4

Tightness controls TC 2 and TC 4 can be used with gas solenoid valves of any nominal size, which are quick opening or slow opening with start rate. It is possible to conduct a tightness test on pneumatically operated or slow opening valves without start rate by using additional auxiliary valves.

Slow opening motorized valves VK up to DN 65 which are directly flanged together can also be checked by TC 2 and TC 4 within a temperature range of 0 to 60°C (32 to 140°F).


TC 4

Tightness control TC 4 consists of detection circuitry and can be installed in the control cabinet, separately from the system. An external pressure switch takes over the mechanical pressure test between the valves. Tightness control TC 4 is independent of gas type and inlet pressure p_e and can be used for a test period of up to 10 minutes with a large test volume.

TC 3


Tightness control TC 3 is a universal device for quick and slow opening gas solenoid valves of any nominal size as well as for motorized valves. The tightness test is carried out with the valves installed in TC 3.

TC 1 mounted to a combination control CG

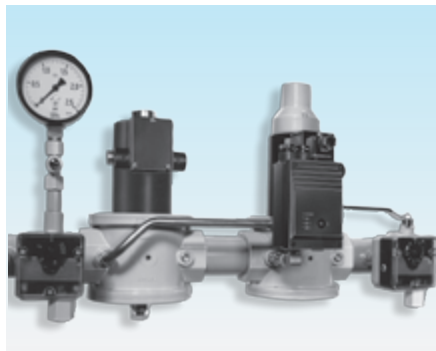


TC 2 in a gas inlet section between a quick opening and a slow opening gas solenoid valve VG

TC 3 on a heating boiler

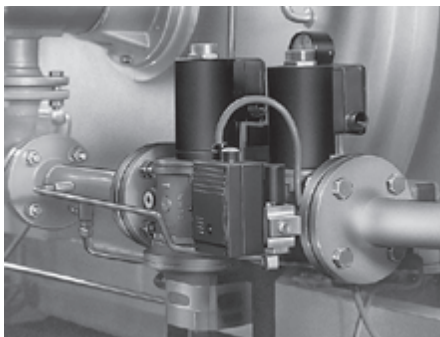


TC 3 for tightness control on gas motorized valves VK

TC 4 installed separately from the system in a control cabinet

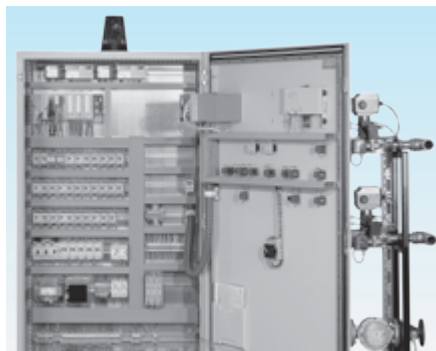

TC 4 installed in control cabinet by securing the lower section with screws or snapping it on to a DIN rail

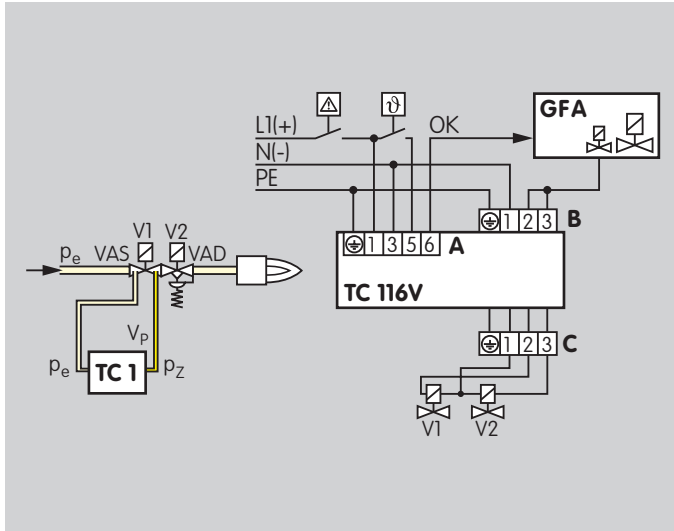

1.1 Examples of application

1.1.1 TC 116V with valVario controls

Tightness control TC 1 checks gas solenoid valves V1 and V2 for tightness.


If both valves are tight, the tightness control forwards the OK enable signal to the automatic burner control unit GFA. This opens valves V1 and V2 simultaneously. The burner starts.

V1 and V2: quick or slow opening valves with start rate.

A = Supply and signal forwarding

B = Automatic burner control unit

C = Gas solenoid valves

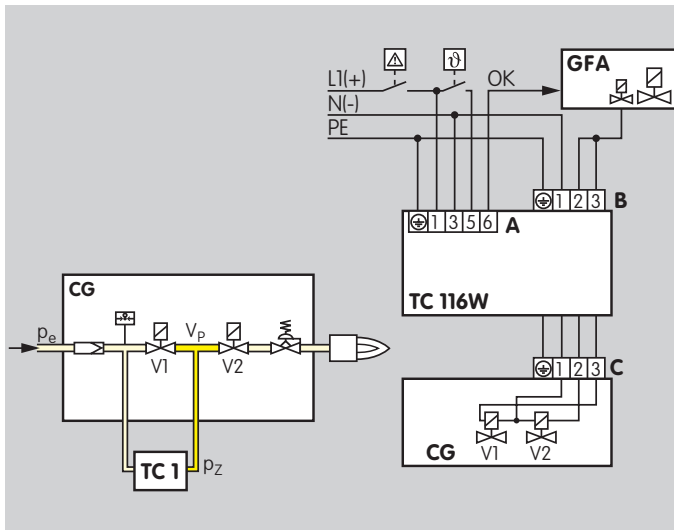

1.1.2 TC 116W with combination control CG..D or CG..V

The tightness control is directly mounted to combination control CG..D or CG..V.



Once the tightness test has been carried out successfully, the tightness control forwards the OK enable signal to the automatic burner control unit GFA. This opens valves V1 and V2 in the combination control CG simultaneously. The burner starts.

V1 and V2: quick opening valves.

A = Supply and signal forwarding

B = Automatic burner control unit

C = Gas solenoid valves

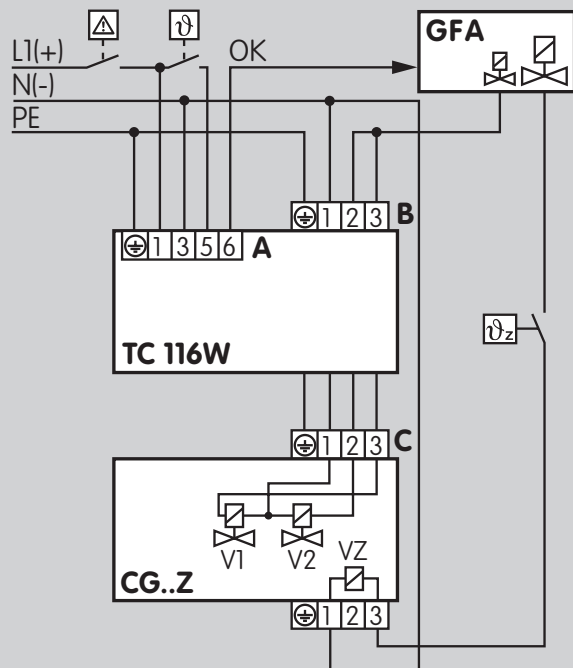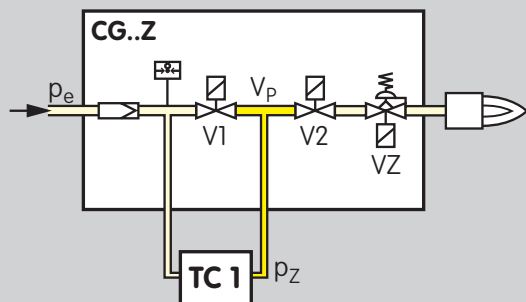

1.1.3 TC 116W with two-stage combination control CG..Z


Once the tightness test has been carried out successfully, the tightness control forwards the OK enable signal to the automatic burner control unit GFA. The pilot valve output of the automatic burner control unit GFA opens valves V1 and V2 in the combination control simultaneously. The burner starts. The main valve output opens the two-stage valve VZ, independently of TC 116W.

V1 and V2: quick opening valves.

A = Supply and signal forwarding

B = Automatic burner control unit

C = Gas solenoid valves

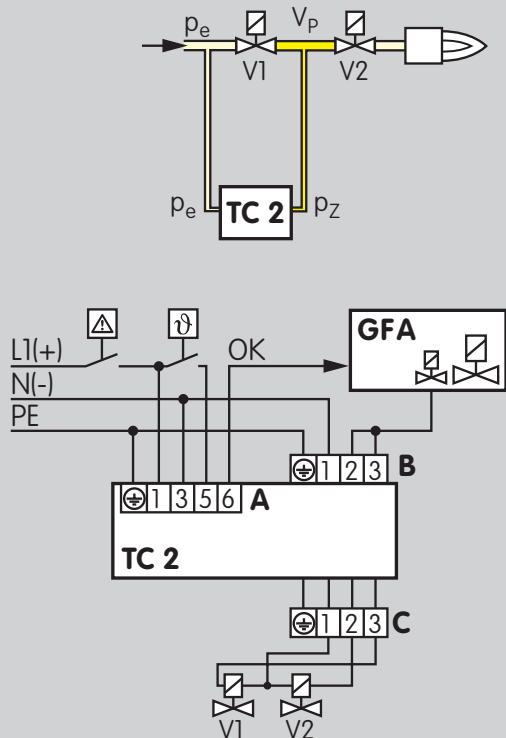

1.1.4 TC 2 with two gas solenoid valves

Tightness control TC 2 checks gas solenoid valves V1 and V2 for tightness.


If both valves are tight, the tightness control forwards the OK enable signal to the automatic burner control unit GFA. This opens valves V1 and V2 simultaneously. The burner starts.

V1 and V2: quick or slow opening valves with start rate.

A = Supply and signal forwarding

B = Automatic burner control unit

C = Gas solenoid valves

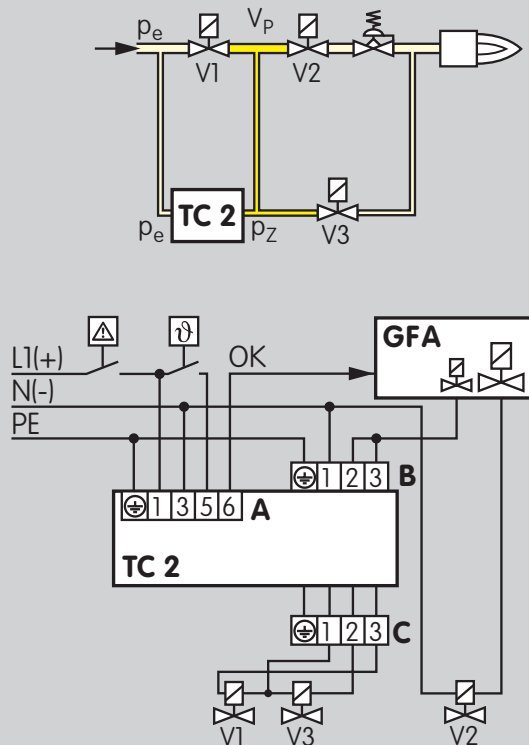

1.1.5 TC 2 with two gas solenoid valves and one pilot gas valve

Tightness control TC 2 checks the gas solenoid valves for tightness. The test volume is discharged into the combustion chamber. Auxiliary valve V3 can be used as a pilot gas valve.



Once the tightness test has been carried out successfully, the tightness control forwards the OK enable signal to the automatic burner control unit GFA. The pilot valve output of the automatic burner control unit GFA opens the gas solenoid valves V1 and V3 simultaneously. The main valve output opens gas solenoid valve V2. The burner starts.

V1 and V2: quick or slow opening valves with start rate.
V3: quick opening, nominal size is dependent on test volume and inlet pressure, see page 32 (Project planning information), but is at least DN 15.

A = Supply and signal forwarding

B = Automatic burner control unit

C = Gas solenoid valves

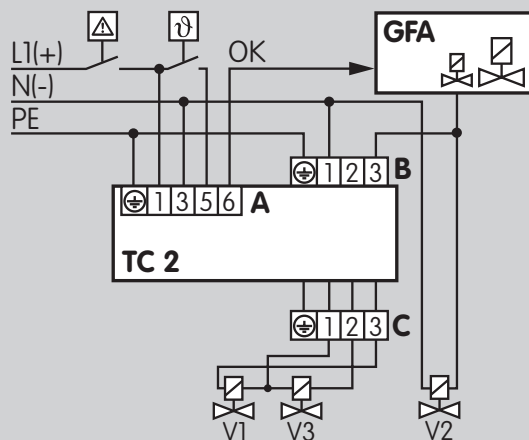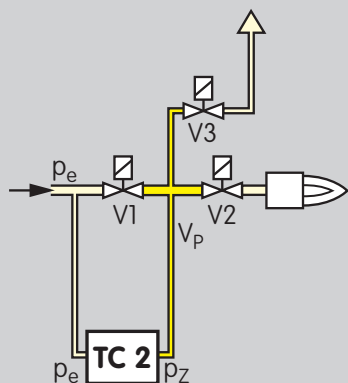

1.1.6 TC 2 with two gas solenoid valves and one auxiliary valve for discharge

Tightness control TC 2 checks the gas solenoid valves V1 and V2 and the auxiliary valve V3 for tightness.

If all the gas solenoid valves are tight, the tightness control forwards the OK enable signal to the automatic burner control unit GFA. The pilot valve output of the automatic burner control unit GFA opens the gas solenoid valves V1 and V2 simultaneously. The burner starts.

A relief line is used to discharge the test volume into the open air via the roof. Thanks to the installed auxiliary valve V3, valve V2 can also be a slow opening motorized valve VK.

V1: quick or slow opening valves with start rate.


V2: any.

V3: quick opening, nominal size is dependent on test volume and inlet pressure, see page 32 (Project planning information), but is at least DN 15.

A = Supply and signal forwarding

B = Automatic burner control unit

C = Gas solenoid valves

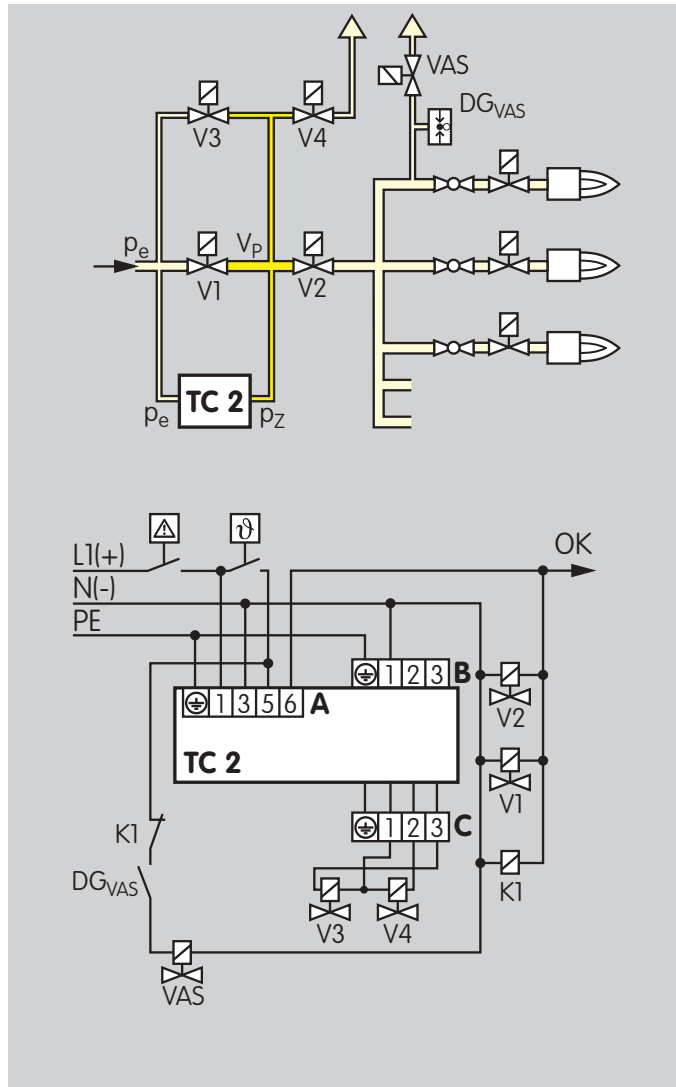

1.1.7 TC 2 in a multiple burner system with 3 valves installed in series

When using slow opening main gas solenoid valves (V1 and V2), auxiliary valves (V3 and V4) must be used for the supply and discharge of the test volume V_p .


Tightness control TC 2 checks the central shut-off valve V1, the gas solenoid valve V2 and the auxiliary valves V3 and V4 for tightness.

Valve V2 can only be checked for tightness when the pressure downstream of V2 approximately corresponds to the atmospheric pressure. The gas solenoid valve VAS and the pressure switch DG_{VAS} are used to relieve the pressure. The pressure switch must be adjusted in such a way so that enough pressure is relieved and no air can get into the pipework.

Once the tightness test has been carried out successfully, the tightness control TC 2 opens the main gas solenoid valves V1 and V2 with the OK enable signal and enables the downstream burner control units.

V3 and V4: quick opening, nominal size is dependent on test volume and inlet pressure, see page 32 (Project planning information), but is at least DN 15.

- A** = Supply and signal forwarding
- B** = Automatic burner control unit
- C** = Gas solenoid valves

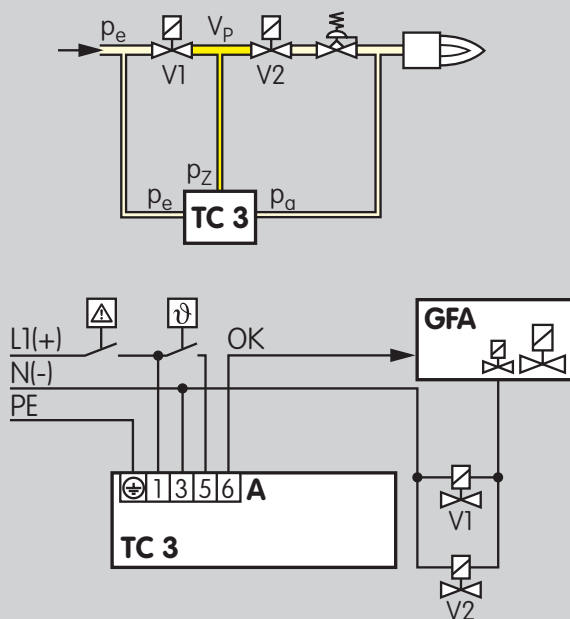


1.1.8 TC 3 with two gas solenoid valves

Tightness control TC 3 checks the slow opening gas solenoid valves or motorized valves VK for tightness using the auxiliary valves installed in TC 3.

Once the tightness test has been carried out successfully, the tightness control forwards the OK enable signal to the automatic burner control unit GFA. The pilot valve output of the automatic burner control unit GFA opens valves V1 and V2 simultaneously. The burner starts.

V1 and V2: any.

A = Supply and signal forwarding

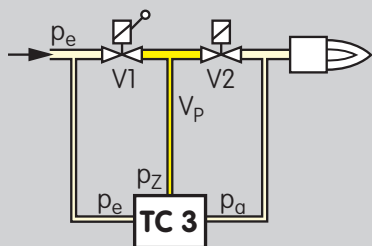


1.1.9 TC 3 with a manually resettable valve


Valves, which are manually reset, cannot be opened by the tightness control. The tightness test is then carried out using an additional auxiliary valve.

Tightness control TC 3 checks the tightness between the manually resettable valve V1 and gas solenoid valve V2 using the auxiliary valves installed in TC 3.

Once the tightness test has been carried out successfully, TC 3 forwards the OK enable signal.

A = Supply and signal forwarding

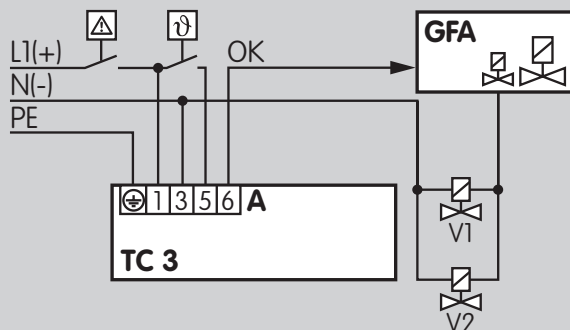

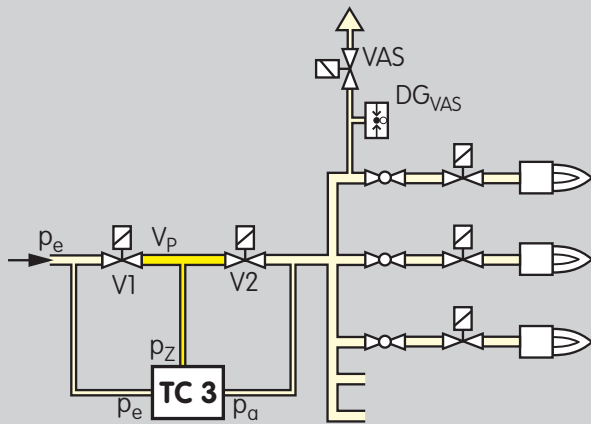


1.1.10 TC 3 in a multiple burner system


Tightness control TC 3 checks the slow opening main gas solenoid valves $V1$ and $V2$ for tightness. The test volume V_p is supplied and discharged via the TC 3 auxiliary valves.

Valve $V2$ can only be checked for tightness when the pressure downstream of $V2$ approximately corresponds to the atmospheric pressure. The gas solenoid valve VAS and the pressure switch DG_{VAS} are used to relieve the pressure. The pressure switch must be adjusted in such a way so that enough pressure is relieved and no air can get into the pipework.

Once the tightness test has been carried out successfully, the tightness control TC 3 opens the main gas solenoid valves $V1$ and $V2$ with the OK enable signal and enables the downstream burner control units.

A = Supply and signal forwarding

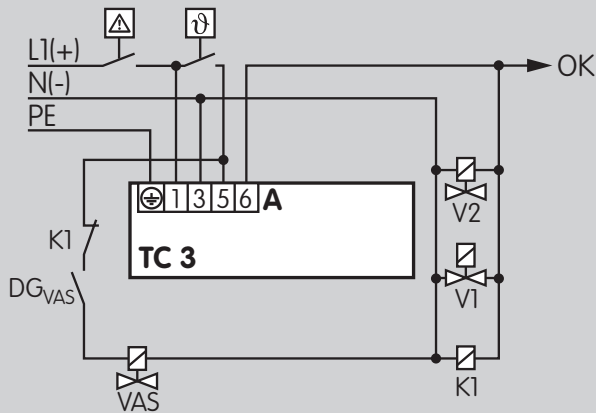

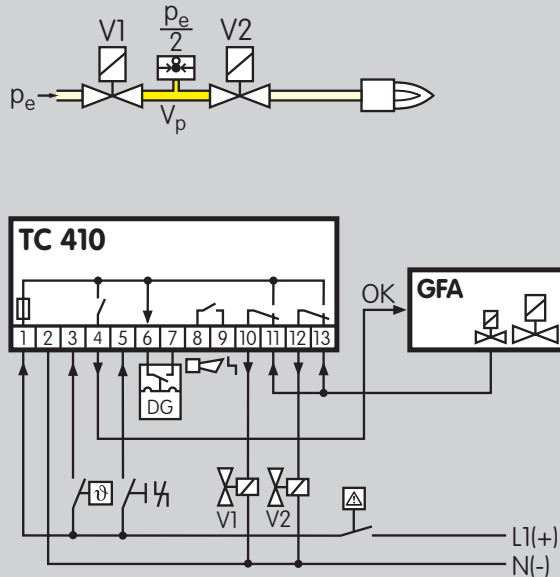


1.1.11 TC 4 with two gas solenoid valves

Tightness control TC 4 checks gas solenoid valves V1 and V2 for tightness.

The external pressure switch monitors the pressure between the two valves.

Once the tightness test has been carried out successfully, the tightness control forwards the OK enable signal to the automatic burner control unit GFA. The pilot valve output of the automatic burner control unit GFA opens the gas solenoid valves V1 and V2 simultaneously. The burner starts.

V1 and V2: quick or slow opening valves with start rate.

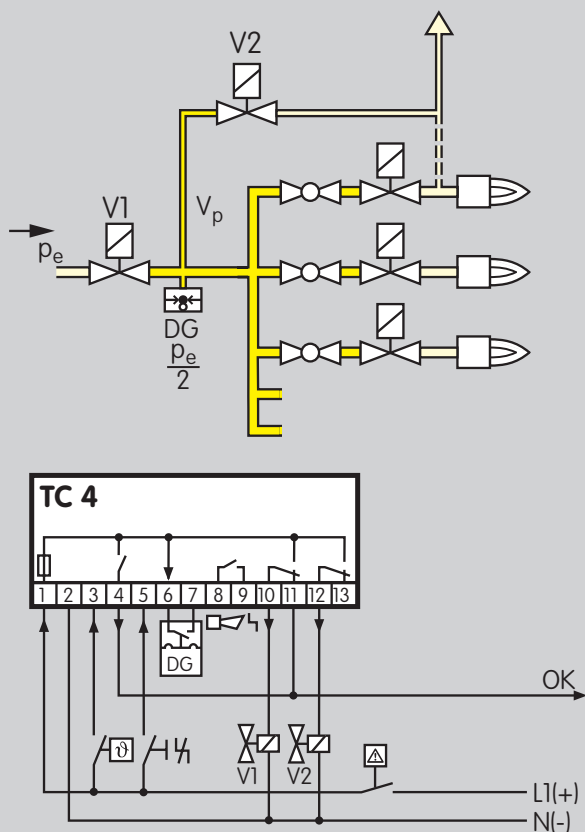

1.1.12 TC 4 in a multiple burner system with one auxiliary valve for discharge



Tightness control TC 4 checks the central shut-off valve V1, the auxiliary valve V2 and several burner valves for tightness. The external pressure switch monitors the pressure between the gas solenoid valves V1, V2 and the burner valves.

Once the tightness test has been carried out successfully, TC 4 opens gas solenoid valve V1. The tightness control forwards the OK enable signal simultaneously to the automatic burner control units for the burner valves. The burner valves open and the burners start.

Thanks to the relief line and auxiliary valve V2, the test volume is discharged into the open air via the roof or into the combustion chamber.

V1: quick opening valve.

V2: quick opening, nominal size is dependent on test volume and inlet pressure, see page 32 (Project planning information), but is at least DN 15.

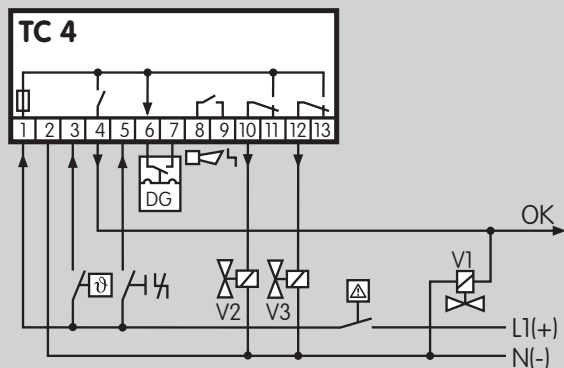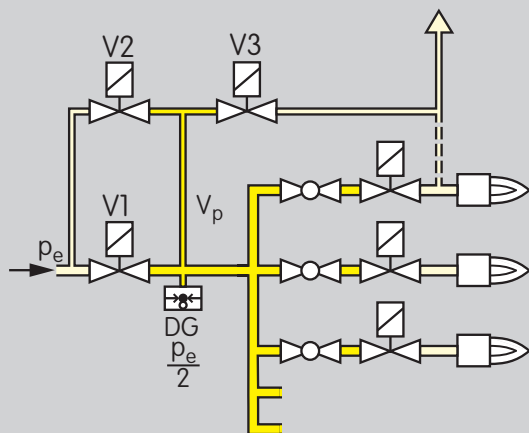

1.1.13 TC 4 in a multiple burner system with two auxiliary valves for supply and discharge

Tightness control TC 4 checks the central shut-off valve V1, auxiliary valves V2 and V3 and several burner valves for tightness.

The test volume is supplied via the auxiliary valve V2.


The external pressure switch monitors the pressure between the gas solenoid valves and the burner valves.

Once the tightness test has been carried out successfully, TC 4 opens the central shut-off valve V1. The tightness control forwards the OK enable signal simultaneously to the automatic burner control units for the burner valves. The burner valves open and the burners start.

Thanks to the relief line and auxiliary valve V3, the test volume is discharged into the open air via the roof or into the combustion chamber.

V1: any.

V2 and V3: quick opening, nominal size is dependent on test volume and inlet pressure, see page 32 (Project planning information), but is at least DN 15.

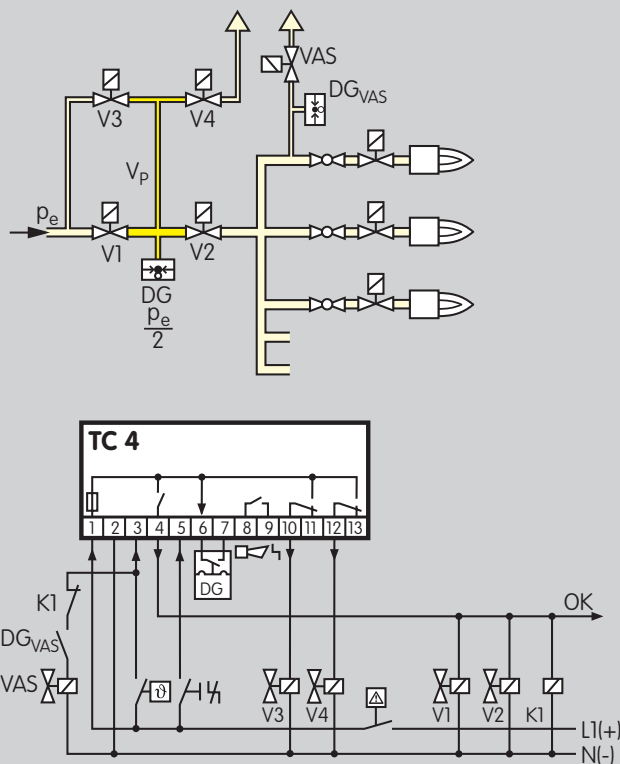

1.1.14 TC 4 in a multiple burner system with 3 valves installed in series

When using slow opening main gas solenoid valves (V1 and V2), auxiliary valves (V3 and V4) must be used for the supply and discharge of the test volume V_p .

Tightness control TC 4 checks the central shut-off valve V1, the gas solenoid valve V2 and the auxiliary valves V3 and V4 for tightness.

Valve V2 can only be checked for tightness when the pressure downstream of V2 approximately corresponds to the atmospheric pressure. The gas solenoid valve VAS and the pressure switch DG_{VAS} are used to relieve the pressure. The pressure switch must be adjusted in such a way so that enough pressure is relieved and no air can get into the pipework.

Once the tightness test has been carried out successfully, the tightness control TC 4 opens the main gas solenoid valves V1 and V2 with the OK enable signal and enables the downstream burner control units.

V3 and V4: quick opening, nominal size is dependent on test volume and inlet pressure, see page 32 (Project planning information), but is at least DN 15.

2 Certification

EC type-tested and certified



- Declaration of conformity (D, GB) – see www.docuthek.com → Elster Kromschroder → Products → 03 Valves and butterfly valves → Tightness controls → TC (K OS Declaration of conformity) → Document type: Certificate
- Tightness control TC is designed for applications pursuant to EN 746.

Meets the requirements of the

- Low Voltage Directive (2006/95/EC) in conjunction with the relevant standards.
- Electromagnetic Compatibility Directive (2004/108/EC) in conjunction with the relevant sections of IEC 801 relating to radiation, as well as EN 50093.

FM approved

TC 1, TC 2 and TC 3 for 120 V and 230 V,
TC 4 for 24 V, 120 V and 230 V



Factory Mutual Research Class: 7411 Safety overpressure slam shut valves.

Designed for applications pursuant to NFPA 85 and NFPA 86.

Link to "Approval Guide" → http://www.approvalguide.com/CC_host/pages/public/custom/FM/login.cfm

UL listed

TC 2 and TC 4 for 120 V



Link to Underwriters Laboratories → <http://database.ul.com/cgi-bin/XYV/template/LISEXT/1FRAME/index.html>


Gas Appliance Electric Accessories → link to file: JHYR.MH28048, ANSI/UL 353, "Limit Controls"

Gas Appliance Electric Accessories Certified for Canada → link to file: JHYR7.MH28048, CSA-C22.2 No. 24, "Temperature-Indicating and -Regulating Equipment"

AGA approved



Link to Australian Gas Association → http://www.agasn.au/product_directory
Approval number: 4581

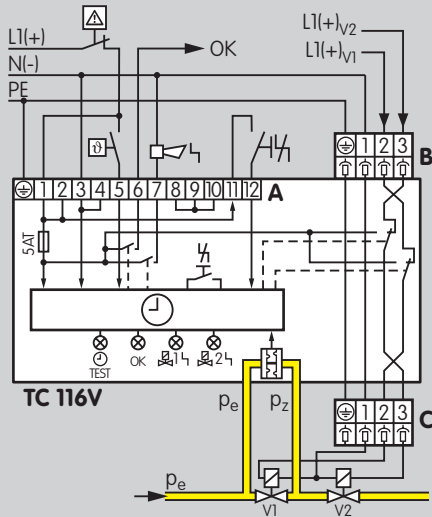

3 Function

3.1 Connection diagrams

Remote reset by applying mains voltage to terminal 12 or via a floating contact between terminals 11 and 12.


3.1.1 TC 116V for valVario controls VAS, VAG and VAD

The connection boxes of the valVario controls must be positioned on the same side and are connected via a single coupler plug.

A = Supply and signal forwarding

B = Automatic burner control unit

C = Gas solenoid valves

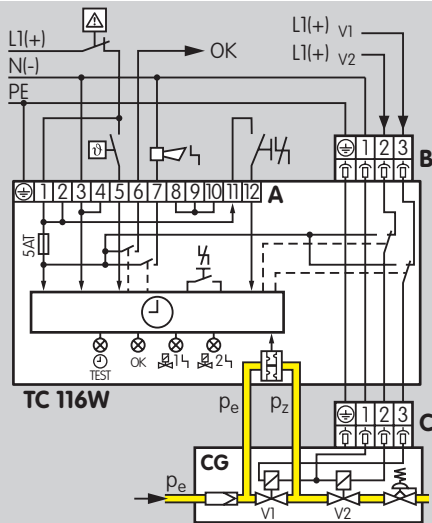


3.1.2 TC 116W

A = Supply and signal forwarding

B = Automatic burner control unit

C = Gas solenoid valves

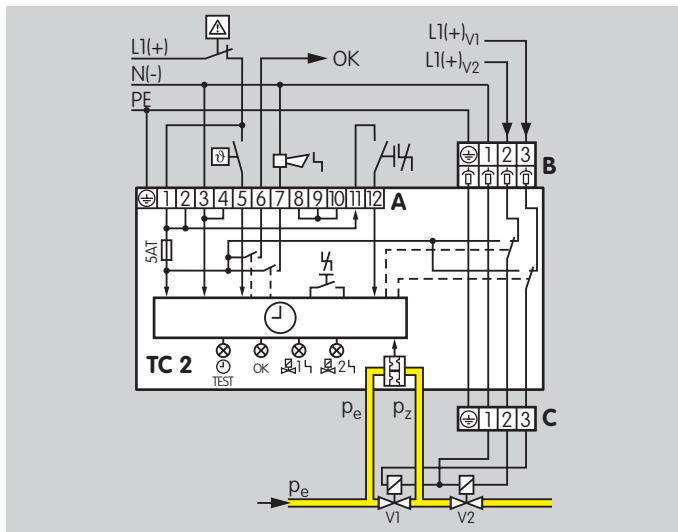

3.1.3 TC 2

A = Supply and signal forwarding


B = Automatic burner control unit

C = Gas solenoid valves:

1 = neutral conductor N (-) = blue


2 = mains voltage to burner-side valve L_{V2} (+) = brown

3 = mains voltage to inlet valve L_{V1} (+) = black

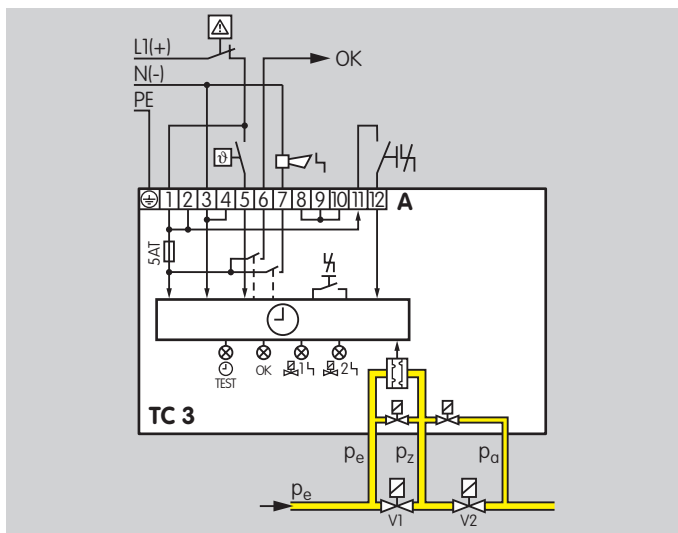

3.1.4 TC 3



A = Supply and signal forwarding

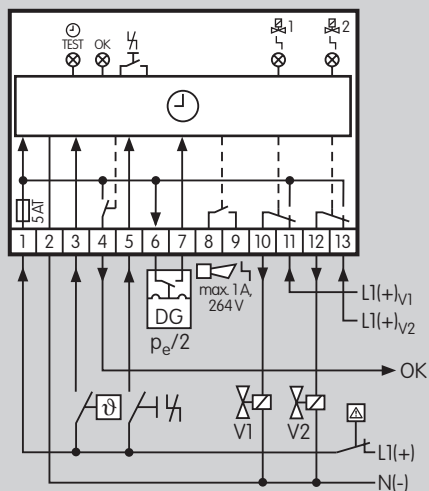

3.1.5 TC 4

Fault signalling contact on terminals 8 and 9:
dry contact (not internally fused), max. 1 A for 264 V, max. 2 A for 120 V.

Connect the NO contact on the pressure switch to terminals 6 and 7.

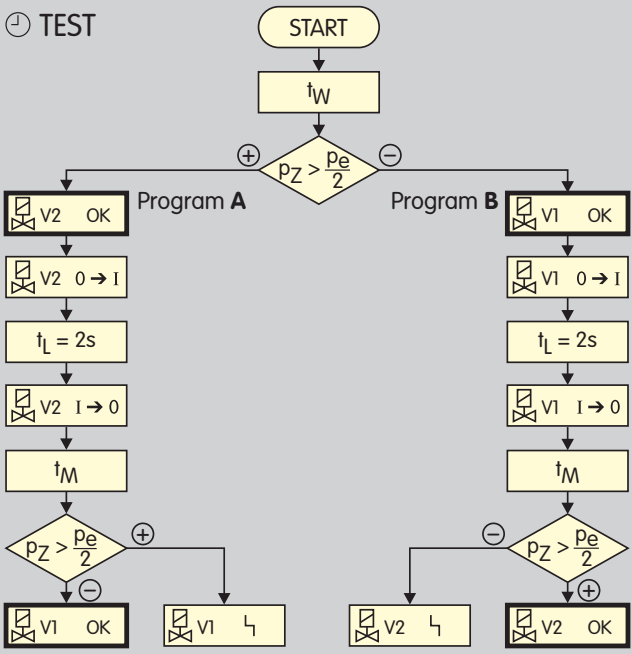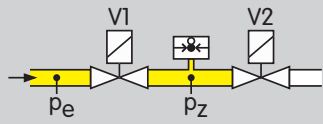

3.2 Program sequence

The TEST starts with the waiting time t_W . Once the waiting time t_W has elapsed, the tightness control TC checks the pressure p_Z between the inlet valve V1 and the outlet valve V2.

Program A


If the pressure p_Z is greater than half the inlet pressure $p_e/2$, valve V2 is OK.

V2 opens for the fixed opening time t_L of 2 s and the test volume is discharged. V2 closes again. During the measurement time t_M , the TC checks the pressure p_Z between the valves again. If the pressure p_Z is now less than half the inlet pressure $p_e/2$, valve V1 is also OK.

Program B

If the pressure p_Z is less than half the inlet pressure $p_e/2$, valve V1 is OK.


V1 opens for the fixed opening time t_L of 2 s and the test volume is supplied. V1 closes again. If the pressure p_Z is now greater than half the inlet pressure $p_e/2$, valve V2 is also OK.

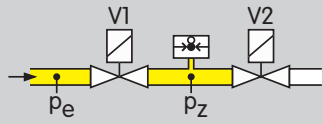

The tightness control TC runs program **A** or **B** depending on the initial situation. Both valves are checked for tightness respectively, but only one valve is opened at a time.

During the test, the TC also checks their fail-safe operation. After a brief power failure during the tightness test or operation, the TC restarts automatically.

⌚ TEST

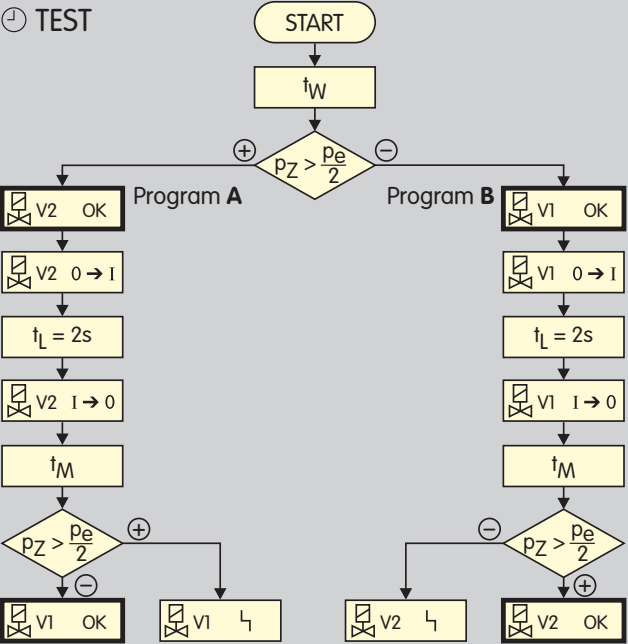



3.3 Test instant



A jumper (left) is used to determine whether the tightness of the gas solenoid valves is to be checked before or after burner run. The tightness control TC is set to "Test before burner run", Mode 1, at the factory.


The test period t_p is set using the second jumper (right), see page 28 (Test period t_p).

3.3.1 Testing before burner run: Mode 1

Mains voltage L1 is switched on. Once the start-up signal ϑ has been applied, the tightness test starts. If the valves are tight, the green OK LED lights up. The OK enable signal is forwarded to the automatic burner control unit.

If the tightness control TC detects a leak on one of the two valves, the red LED lights up for a fault on valve V1 \varnothing_1 or valve V2 \varnothing_2 . A fault is signalled externally $\square \nabla$, e.g. by switching on a buzzer or a warning light.

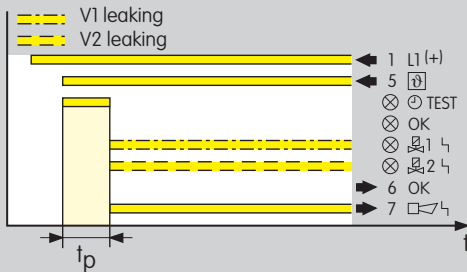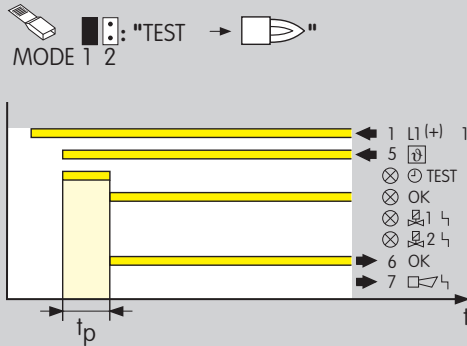

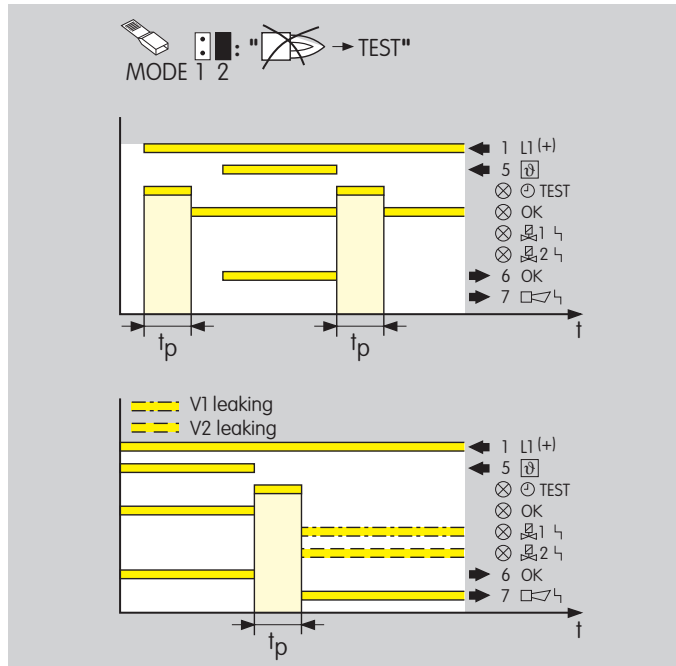

3.3.2 Testing after burner run: Mode 2

If the jumper is set to Mode 2, the tightness test after burner run begins as soon as the burner is switched off.


To ensure that the valves are checked for tightness once before starting up the system, the tightness test runs when the voltage L1 is applied. If the valves are tight, the green OK LED lights up. The OK enable signal is not forwarded to the automatic burner control unit until the start-up signal \varnothing has been applied.

Once the start-up signal \varnothing has been switched off, the tightness test after burner run begins. The OK enable signal is not forwarded to the automatic burner control unit again until the start-up signal \varnothing has been applied.

If the tightness control TC detects a leak on one of the two valves, the red LED lights up for a fault on valve V1 \varnothing_{11} L or valve V2 \varnothing_{22} L. A fault is signalled externally \square L, e.g. by switching on a buzzer or a warning light.

3.4 Power failure

An external fault signal \square L is forwarded by the tightness control and one of the two red LEDs on the TC lights up to indicate a leak on valve V1 or valve V2. After a power failure, the external fault signal remains active. Both red LEDs are now lit. Once a tightness test has been carried out again, the TC detects the leaking valve.

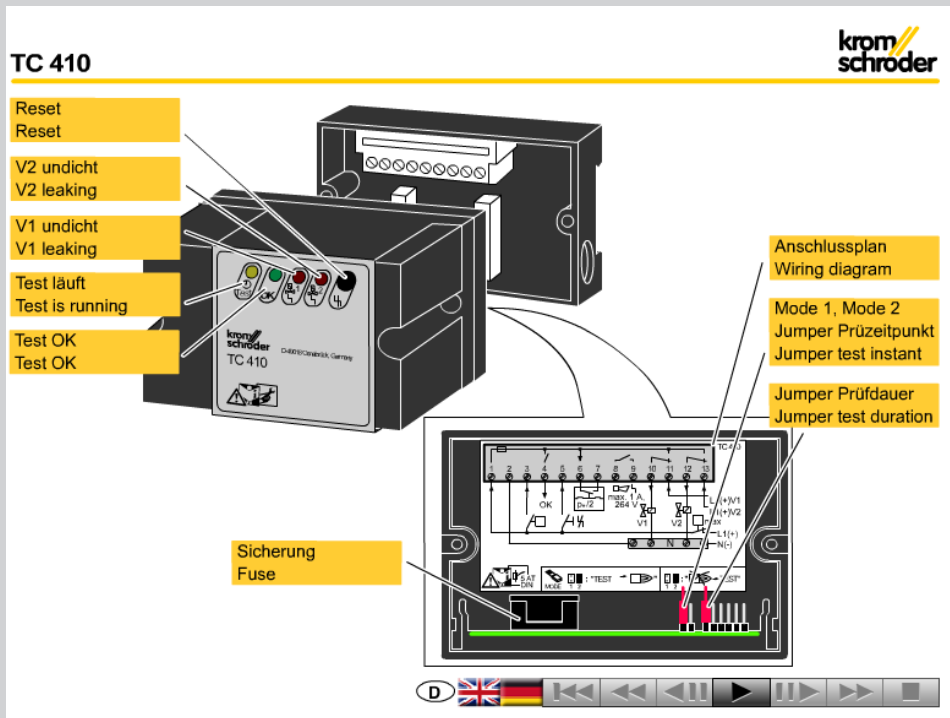

3.5 Animation

The interactive animation shows the function of the tightness control TC 4.

Click on the picture. The animation can be controlled using the control bar at the bottom of the window (as on a DVD player).

To play the animation, you will need Adobe Reader 7 or a newer version. If you do not have Adobe Reader on your system, you

can download it from the Internet. Go to www.adobe.com, click on "Get Adobe Reader" and follow the instructions.

If the animation does not start to play, you can download it from the document library www.docuthek.com as an independent application.

3.6 Test period t_p

The sensitivity of the tightness control TC can be adjusted by adapting the test period t_p for each individual system. The longer the test period t_p , the greater the sensitivity of the TC. It is set using the second jumper on the unit, see page 25 (Test instant).

Type	Test period t_p
TC 1, TC 2, TC 3	10 to 60 s
TC 410-1	10 to 60 s
TC 410-10	100 to 600 s

The required test period t_p is calculated from:

Inlet pressure p_e [mbar]

Leakage rate V_L [l/h]

Test volume V_P [l]

$$t_p [s] = 4 \times \left(\frac{p_e [\text{mbar}] \times V_P [l]}{V_L [l/h]} + 1 s \right)$$

See page 41 (Conversion factors)

3.6.1 Leakage rate


It is possible to check a specific leakage rate V_L using the TC. Within the scope of the European Union, the maximum leakage rate V_L is 0.1% of the maximum flow rate V_{\max} [m³/h (n)].

$$\text{Leakage rate } V_L [l/h] = \frac{V_{\max} [\text{m}^3/\text{h (n)}] \times 1000}{1000}$$

If a small leakage rate V_L is to be detected, a long test period t_p must be set.

3.6.2 Test volume Vp

Test volume Vp is calculated from the valve volume VV, added to the volume of the pipe VR for each additional metre in length L, see page 30 (Calculation example).

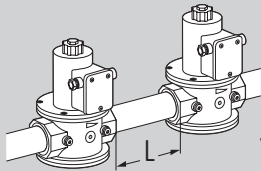


$V_p = V_V + L \times V_R$

Valves	Valve volume V _V [l]	DN	Volume of the pipe per metre V _R [l/m]
VG 10	0.01	10	0.1
VG 15	0.07	15	0.2
VG 20	0.12	20	0.3
VG 25	0.2	25	0.5
VG 40/VK 40	0.7	40	1.3
VG 50/VK 50	1.2	50	2
VG 65/VK 65	2	65	3.3
VG 80/VK 80	4	80	5
VG 100/VK 100	8.3	100	7.9
VG 125/VK 125	13.6	125	12.3
VG 150/VK 150	20	150	17.7
VG 200/VK 200	42	200	31.4
VG 250/VK 250	66	250	49
VAS 1	0.25		
VAS 2	0.82		
VAS 3	1.8		
VAS 6	1.1		
VAS 7	1.4		
VAS 8	2.3		
VAS 9	4.3		

Test volume Vp for TC 410-10 is almost arbitrary thanks to the adjustable max. test period tp of 600 s.

3.6.3 Calculation example

2 valves VG 80,

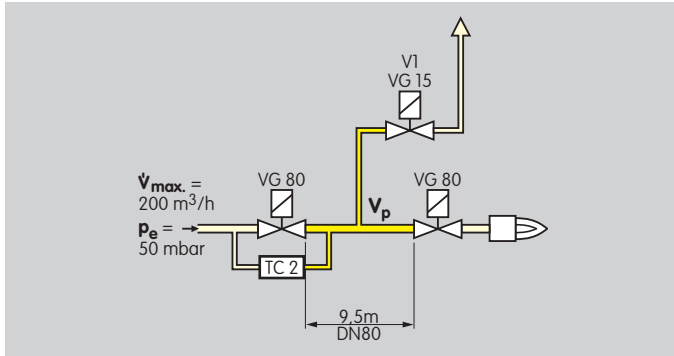Distance $L = 9.5 \text{ m}$ (31.2 ft),Inlet pressure $p_e = 50 \text{ mbar}$ (20 "WC),Max. flow rate $V_{\max.} = 200 \text{ m}^3/\text{h}$ (7062 SCFH).

$$\text{Leakage rate } V_L \text{ [l/h]} = \frac{200 \text{ m}^3/\text{h} \times 1000}{1000} = 200 \text{ l/h (52.8 gal/h)}$$

$$\text{Test volume } V_P \text{ [l]} = 4 \text{ l} + 9.5 \text{ m} \times 5 \text{ l/m} = 51.5 \text{ l (13.6 gal)}$$

$$\text{Test period } t_P \text{ [s]} = 4 \times \left(\frac{50 \times 51.5}{200} + 1 \right) = 55.5 \text{ s}$$

Set the next highest value (60 s) with the jumper, see page 25 (Test instant).

Selecting auxiliary valve V1, see page 32 (Project planning information).

3.6.4 Calculating the test period t_P

Standard

T-product

Inlet pressure p_e Max. flow rate V Max. leakage rate V_L Nominal diameter DN Enter V_P Distance L between V1 and V2Test volume V_P Calculated test period t_P Test period t_P to be set

4 Selection

4.1 Selection table

	1	0	6	8	T	-1*	-10	R	N	V**	W	05	K	N	T
TC 1	●	–	●	–	○	●	–	–	–	●	●	●	●	●	●
TC 2	●	–	–	●	○	●	–	●	●	–	–	●	●	●	●
TC 3***	●	–	–	●	○	●	–	●	●	–	–	●	●	●	●
TC 4	●	●	–	–	○	●	●	–	–	–	–	–	●	●	●

● = standard, ○ = available

Order example

TC 318R05T


* Designation "-1" only in type code for TC 4

** An additional adapter plate is required for the TC 116V for attachment on the right- or left-hand side of valVario controls, see page 35 (Accessories)

*** Max. test volume V_p TC 3, see page 32 (Project planning information)

5 Type code

Code	Description
TC	Tightness control
1	For attachment to valVario controls and CG
2	For quick opening individual valves
3	For quick or slow opening or manually resettable individual valves
4	For control cabinet installation
1	Testing before or after burner run
0	External pressure switch required
6	6 mm (0.24") connection
8	8 mm, 1/4" (0.31") connection
T	T-product
-1	Test period 10 to 60 s
-10	Test period 100 to 600 s
R	Rp internal thread
N	NPT internal thread
V	Mounted to valVario controls using adapter plate
W	Mounted to combination control CG
05	p_u max. 500 mbar (7.25 psig)
K	Mains voltage: 24 V DC
N	110/120 V AC, 50/60 Hz
T	220/240 V AC, 50/60 Hz

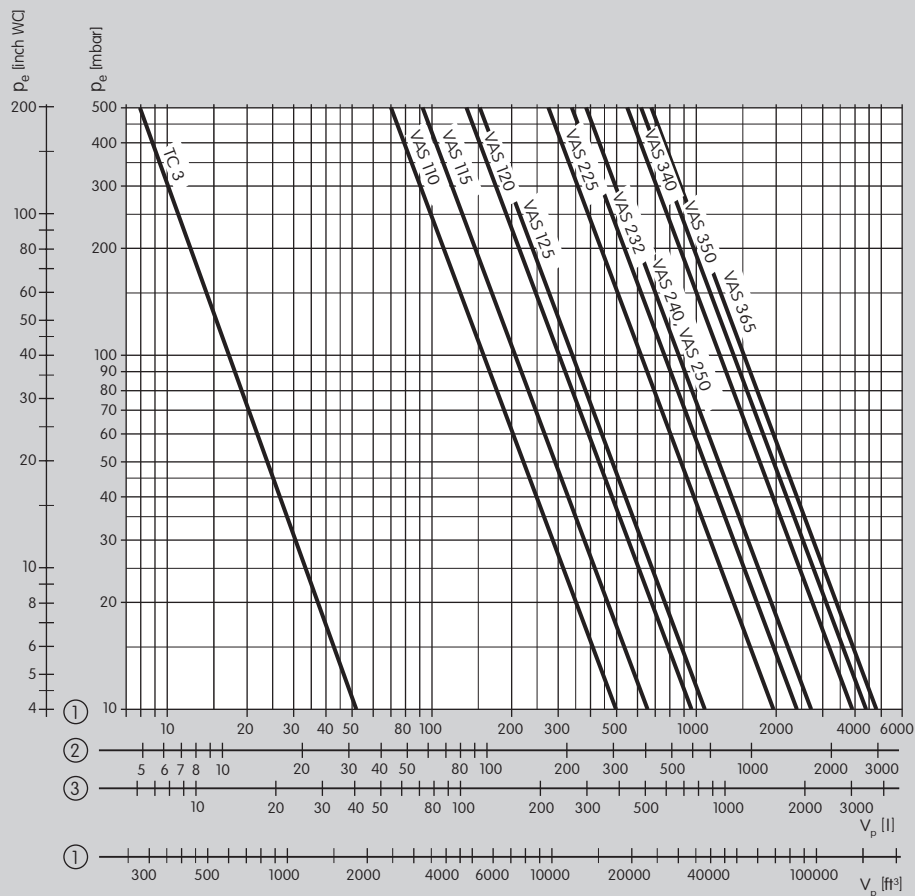

6 Project planning information

On slow opening valves without start rate or pneumatically operated valves, the test volume can be supplied or discharged via auxiliary valves, if discharge into the furnace chamber is impossible for process reasons.

6.1 Selecting the auxiliary valves

Selecting auxiliary valve V1:

Values for V_p and p_e , see page 30 (Calculation example)

$V_p = 51.5 \text{ l (13.4 gal)}$,
 $p_e = 50 \text{ mbar (19.5 "WC)}$
 selected \Rightarrow VAS 110.

The valve is sufficiently large to vent the pipe between the valves.

6.2 Start rate

The tightness control TC requires a minimum start rate in order to carry out tightness tests on slow opening valves:

up to 5 l (1.3 gal) test volume $V_p =$

5% of maximum flow rate $V_{max.}$


up to 12 l (3.12 gal) test volume $V_p =$

10% of maximum flow rate $V_{max.}$

6.3 Installation

Installation position TC 1 to TC 3: in the vertical or horizontal position, front panel must not point upwards or downwards.

Installation position TC 4: any.

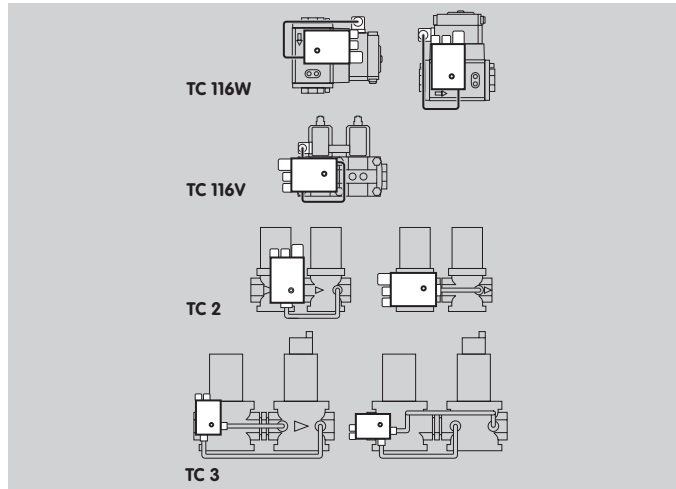

In the case of very large test volumes V_p , an installed relief line should be of nominal size 40 to allow for the discharge of the test volume V_p .

Avoid condensation in the system.

The tightness control TC must not be in contact with masonry, minimum distance 20 mm (0.78 inches).

6.2.1 TC 116V for valVario controls

The connection boxes of the valVario controls must be positioned on the same side and are connected via a coupler plug. On a valve/pressure regulator combination, the pressure regulator must be positioned at the outlet.

When using a gas solenoid valve with air/gas ratio control VAG, the air/gas ratio control must be activated with air during the test period t_p so that the valve can discharge the interspace pressure p_z .


6.2.2 TC 4

Install by bolting the lower section.

The upper section containing the detection circuitry is a push connection fit into the lower section. For installation in the control cabinet housing, for example, the lower section can be secured with screws or mounted on a DIN rail.




Snap attachment for DIN rails
Width = 35 mm (1.36 inch).

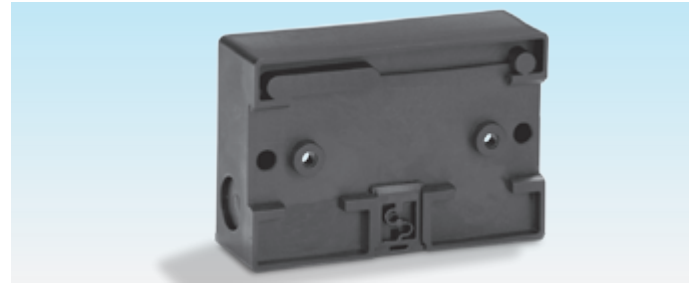

7 Accessories

7.1 Tightness control TC 116V

For VAS 1–3

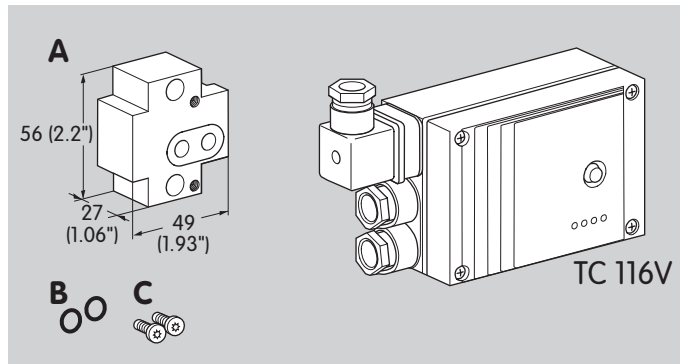


An adapter plate is required to attach the tightness control to the right- or left-hand side of the gas solenoid valve VAS 1–3:

Scope of delivery: **A** 1 × adapter plate,
B 2 × O-rings,
C 2 × retaining screws.

For attachment to: left-hand side: Order No. 74922391
 right-hand side: Order No. 74921995

For VCS 6–9

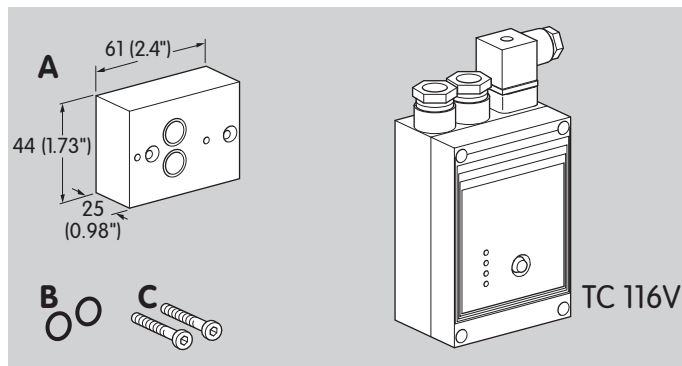

An adapter plate is required to attach the tightness control to the double solenoid valve VCS 6–9:

Scope of delivery: **A** 1 × adapter plate,
B 2 × O-rings,
C 2 × retaining screws.

Order No. 74922822

7.2 External pressure switch for TC 4



Gas pressure switches DG, DG..C for monitoring the pressure between the valves to be checked.

For inlet pressures of 0.5 to 500 mbar (0.2 to 195 "WC).

The switching differential may not exceed $\pm 10\%$ of the set switching pressure.

(see Technical Information bulletin Pressure switch for gas DG, DG..C at www.docuthek.com).

7.2.1 Adjustment

The external pressure switch is set to half the inlet pressure $p_e/2$ (only NO contact required) in order to check both valves with equal sensitivity.

Example:

$p_e = 100 \text{ mbar (39 "WC)}$,

set switching pressure $p_e/2 = 50 \text{ mbar (19.5 "WC)}$,

max. switching differential:

$50 \text{ mbar} \times 10\% = 5 \text{ mbar (19.5 "WC} \times 10\% = 1.95 \text{ "WC)}$,

which means the switch-on and switch-off pressure must be between 45 mbar (17.55 "WC) and 55 mbar (21.45 "WC).

8 Technical data

Mains voltage:

110/120 V AC, -15/+10%, 50/60 Hz,
220/240 V AC, -15/+10%, 50/60 Hz,
24 V DC, $\pm 20\%$.

Power consumption:

10 VA for 110/120 V AC and 220/240 V AC,
1.2 W for 24 V DC.

Ambient temperature:

-15 to +60°C (+5 to +140°F), no condensation permitted.

Screw terminals 2.5 mm².

Fusing:

fine-wire fuse 5 A, slow-acting, H pursuant to IEC 127, also protects the valve outputs and external operating signal.

External operating signal:

with mains voltage, max. 5 A resistive load
(UL listed: 5 A for 120 V),
max. 2 A at $\cos \varphi = 0.35$ (pilot duty).

External fault signal:

fault signalling contact, max. 5 A for 264 V.

Reset:

using a button on the device.

Remote reset:

by applying mains voltage.

Housing made of impact-resistant plastic.

TC 1–3

For natural gas, town gas and LPG (gaseous), also for biologically produced methane.

Inlet pressure p_e : 10 to 500 mbar (3.9 to 195 "WC).

Test period t_P : 10 to 60 s, adjustable.

Set at the factory to 10 s.

TC 3: power consumption of the installed valves during the opening time t_L : max. 9.5 VA (W).

Enclosure: IP 54.

Standard coupler plug to DIN 43650/ISO 4400.

Weight:

TC 1: 550 g (1.21 lbs),
TC 2: 900 g (1.98 lbs),
TC 3: 1500 g (3.31 lbs).

TC 4

Gas type and inlet pressure p_e :
dependent on external pressure switch.

The pressure switch is set to half the inlet pressure $p_e/2$. The switching differential may not exceed $\pm 10\%$ of the set switching pressure, see page 36 (External pressure switch for TC 4).

Test period t_P :

TC 410-1: 10 to 60 s, adjustable.

Set at the factory to 10 s.

TC 410-10: 100 to 600 s, adjustable.

Set at the factory to 100 s.

Enclosure: IP 40.


External fault signal:

dry contact (not internally fused),
max. 1 A for 264 V, max. 2 A for 120 V.

Lower section with connection terminals.


5 knock-out holes for M16 plastic cable glands.


Weight: approx. 400 g (0.88 lbs).

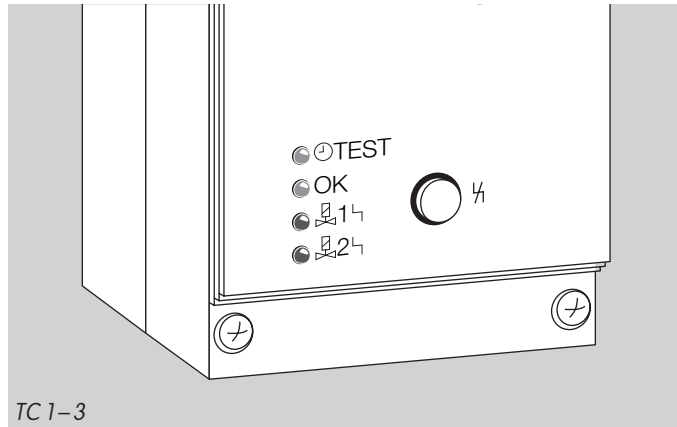


8.1 Indicators and operating controls

- ⓘ TEST = TEST phase (yellow)
- OK = Operating signal (green)
- 1 = Fault valve 1 (red)
- 2 = Fault valve 2 (red)
- ⏏ = Reset button

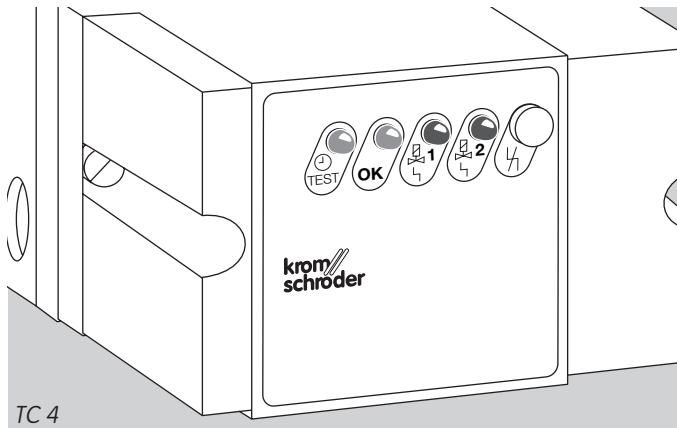

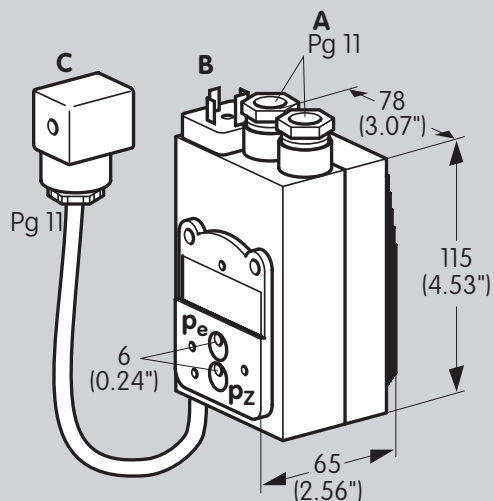

TC 1

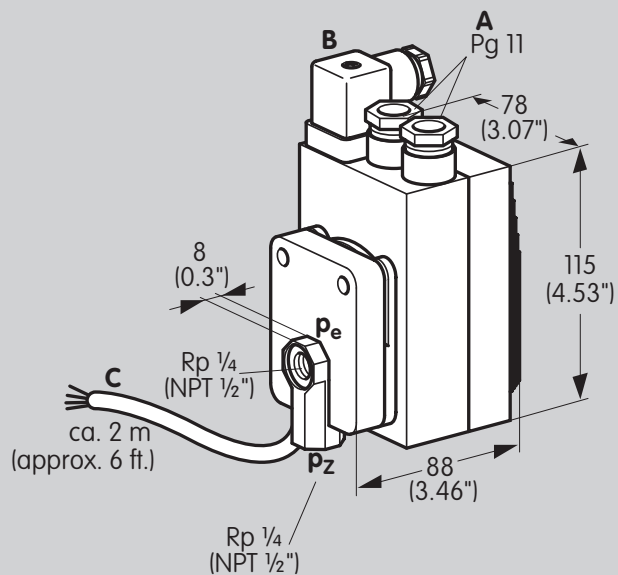

TC 2

8.2 Dimensions

8.2.1 TC 1, TC 2



A = Supply and signal forwarding

B = Automatic burner control unit



C = Gas solenoid valves

p_e = Inlet pressure p_e

p_z = Interspace pressure p_z

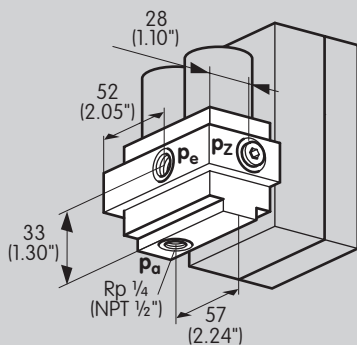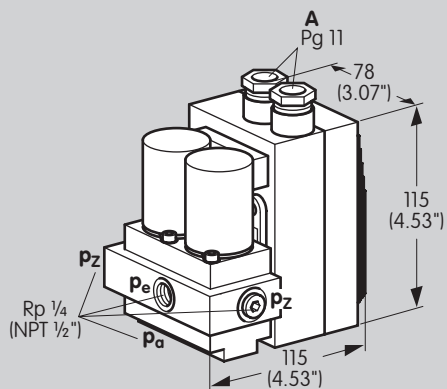

TC 3

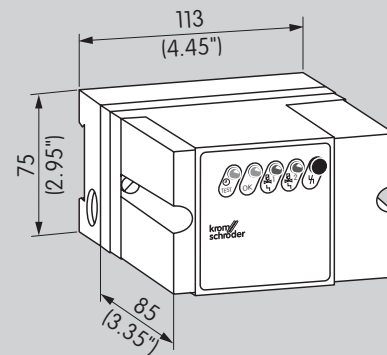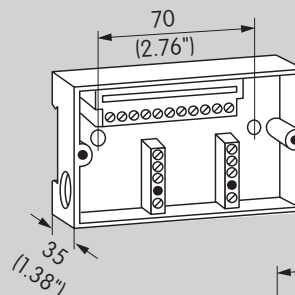

TC 4

8.2.2 TC 3, TC 4

A = Supply and signal forwarding

p_e = Inlet pressure p_e

p_z = Interspace pressure p_z

p_a = Outlet pressure p_a

8.3 Conversion factors

SI unit ×	multiplier =	US unit
m ³ /h	35.31	SCFH
bar	14.5	psi
mbar	0.0145	psi
mbar	0.39	"WC
mm	0.039	inch
kg	2.2	lbs
litres	0.26	gal

US unit ×	multiplier =	SI unit
SCFH	0.0283	m ³ /h
psi	0.0689	bar
psi	68.89	mbar
"WC	2.54	mbar
inch	25.4	mm
lbs	0.45	kg
gal	3.79	litres

$$^{\circ}\text{C} = (^{\circ}\text{F} - 32) \times \frac{5}{9}$$

$$^{\circ}\text{F} = (^{\circ}\text{C} \times \frac{9}{5}) + 32$$

9 Maintenance cycles

The tightness control requires little servicing. We recommend a function check once a year.

10 Legend

$p_e/2$ Half the inlet pressure

p_z Interspace pressure*


L1 (+) Voltage


 Start-up signal


 TEST Test phase

OK Ready for operation

 Safety interlocks (Limits)

 1 \hookleftarrow Fault gas valve V1

 2 \hookleftarrow Fault gas valve V2

 \hookleftarrow Fault signal


 Gas valve

 Air valve

 Flame signal

\hookleftarrow Reset

 Input signal

 Output signal

t_p Test period**

t_W Waiting time

t_L Opening time = 2 s

t_M Measurement time

* The interspace pressure is the pressure between the gas solenoid valves to be checked for tightness.

** The test period t_p is the sum of the waiting time t_W , the fixed opening time t_L of 2 s and the measurement time t_M .

Feedback

Finally, we are offering you the opportunity to assess this "Technical Information (TI)" and to give us your opinion, so that we can improve our documents further and suit them to your needs.

Clarity

Found information quickly
Searched for a long time
Didn't find information
What is missing?
No answer

Comprehension

Coherent
Too complicated
No answer

Scope

Too little
Sufficient
Too wide
No answer

Use

To get to know the product
To choose a product
Planning
To look for information

Navigation

I can find my way around
I got "lost"
No answer

My scope of functions

Technical department
Sales
No answer

Remarks

(Adobe Reader 7 or higher required)
www.adobe.com

Contact

Elster GmbH
Postfach 2809 · 49018 Osnabrück
Strotheweg 1 · 49504 Lotte (Büren)
Germany
T +49 541 1214-0
F +49 541 1214-370
info@kromschroeder.com
www.kromschroeder.com
www.elster.com

The current addresses of our international agents are available on the Internet:
www.kromschroeder.de/index.php?id=718&L=1

We reserve the right to make technical modifications in the interests of progress.
Copyright © 2011 Elster Group
All rights reserved.